


DLXCHANGER

Assembly Instructions



+44 (0) 844 335 3919

1

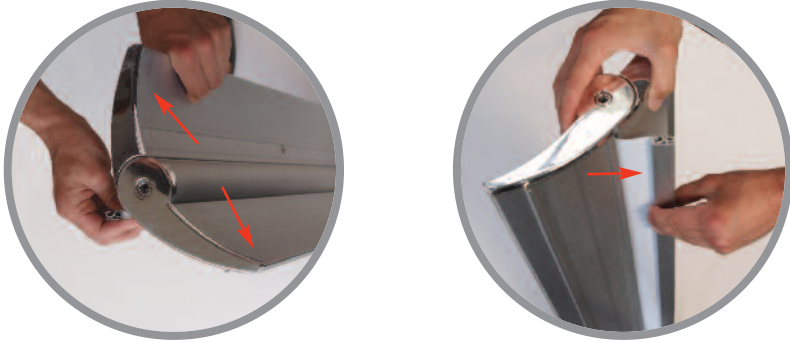

If graphic has already been attached to cartridge (start at stage 2 if not) please fully open system, lifting graphic rail out slightly to prevent it getting stuck in between front and back sections of the base. Then, skip to stage 6.

2



Affix graphic rail squarely and securely to the top of the graphic, ensuring the image side is on the same side as the smooth front of the graphic rail.

3



Fully open out system and place on a flat surface

4



Attach graphic squarely to system as per instructions on feeder strip.

5




Remove locking pin from graphic cartridge in underside of system. **WARNING** - Retain a firm grip on graphic when removing locking pin as the graphic will be under tension. Using both hands, allow the graphic to slowly feed back into base cassette.

6




Fully insert telescopic pole into base cassette.

7

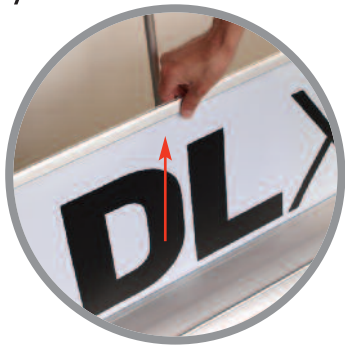

Firmly hold and pull graphic rail up towards moulding at the top of the bungee pole. Angle graphic rail to insert protruding edge of moulding into channel and rotate back to vertical to secure rail to moulding.

8

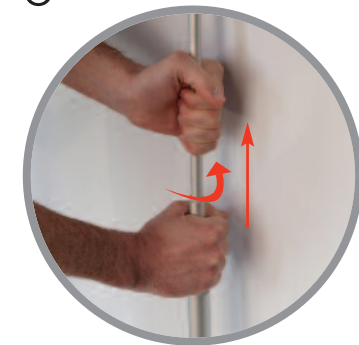

Fully extend top two sections of the telescopic pole by rotating each section anti-clockwise, pulling up until it stops, and fully rotating section clockwise to lock in position.

9




Final extension piece to be pulled up from bottom pole section until red mark is visible. Fully rotate section clockwise to secure. Red line indicates position at which visible graphic height is 2000mm. **This completes the assembly of your DLXchanger.**

11




Angle and lift graphic rail up away from moulding and, carefully and squarely, feed remainder of graphic back into base cassette.

10

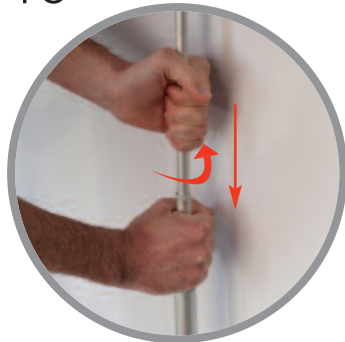

To disassemble system, rotate each of the extended telescopic pole sections anti-clockwise to unlock, and allow them to retract back down.

12

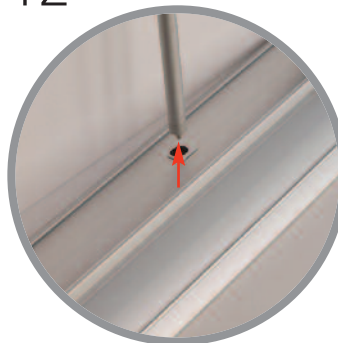

Remove telescopic pole from base, close base cassette, and re-pack items into carry bag.

Exchanging graphic cartridge

13




Pull graphic approximately 100mm out from base and reinsert locking pin.

14



With the system still fully open, lay it upside down on a flat surface.

15

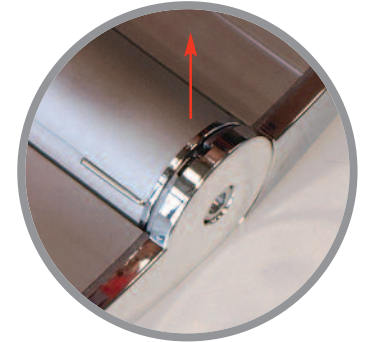

Using two hands, put fingertips into two channels at one end of the graphic cassette and pull up away from base. Repeat for opposite end of graphic cassette.

16



Close system slightly to allow graphic rail to pass through aperture in base and fully remove graphic cassette.

17




On replacement cartridge with graphic fully installed, pull graphic approximately 100mm out from base and insert locking pin.

18



With base cassette still in its slightly closed position, feed graphic rail and graphic through aperture. Ensure that the image side of the graphic faces the front of the system.

19

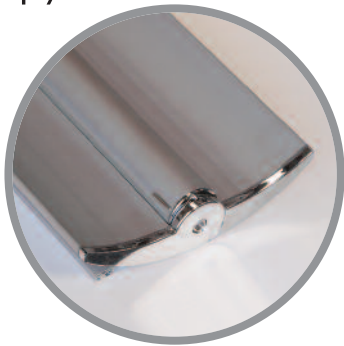

Fully open base cassette and lay it upside down on a flat surface.

20



Align protruding pins on graphic cassette with openings in underside of base cassette. Push graphic cassette down at both ends until it clicks securely into position.

21



Holding graphic firmly against the surface of the base cassette, remove locking pin to tension graphic.

22



Using both hands, allow graphic to slowly retract into base.

23

To erect system, repeat steps 6 to 9.

