



AV42" Screen Stand - Audio Visual Display

- Contemporary design for mounting a flat screen up to 42" wide and portrait graphic panel
- Elegant high quality stand with screen tilt facility, finished in Olympic satin silver
- Simple robust assembly incorporating wheel braked swivel castors as standard
- Complete cable management can be achieved within central column
- Optional equipment tray for discreet mounting under base
- Quality assured - 5 year guarantee
- Footprint 1107mm x 424mm
- Approximate overall height 2000mm (inc. screen)
- Nett weight 29Kg (ex. screen and tray)

AV42 Graphic Specification

1020mm x 965mm

- Visible graphic area
1010mmH x 945mmW
- Finished print size
1020mmH x 965mmW
- Image bleed area
1040mmH x 985mmW

TOP

1020mm




BOTTOM

965mm



AV22", AV32" and AV42" ScreenStand Assembly Instructions

1

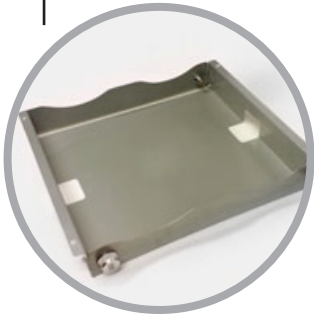

Start your assembly at stage 5 if the AV tray option was not required.

2



Place the ScreenStand base upside down.

3



Position the AV Tray onto the base lining up the fixing holes.

4



Using the 4 screws and washers provided, securely fasten the AV Tray to the ScreenStand base.

5



Pull off both side trim mouldings.

6



Loosen clamp bracket at bottom of column assembly.

7



Position column centrally within central channel and fully tighten both clamp bracket screws.

8



Slide each curved profile into opposite ends of the central channel ensuring uprights arc away from column.

9




Use the top rail profile to determine the correct distance between the two curved uprights.

10



Ensure uprights are positioned centrally and tighten pre-located screws (two per upright). Replace both side trim mouldings.

11

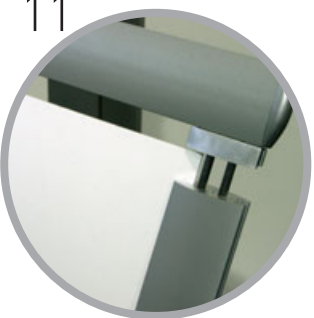

Slot your graphic in between the uprights, and cap off with the push-fit top rail.

12



Bolt your monitor to the Vesa mount (AV22") or universal mount bracket (AV32" and AV42"). See the instructions supplied with your monitor.

AV ScreenStand Tray Assembly Instructions

1



Place the ScreenStand base upside down.

2



Position the AV Tray onto the base lining up the fixing holes.

3



Using the 4 screws and washers provided, securely fasten the AV Tray to the ScreenStand base.

